

Solo III Display (GSM)

Quick Reference Guide

About your Solo III display

Your Solo III display will help you understand just how much electricity your solar PV system is generating, how much your house is using and whether there is any electricity being exported to the grid.

Signal strength

Signal quality to the hub.

Usage totals


Select between **GEN** (generation), **USE** (house consumption), **IMP** (amount being used from the grid). All values are shown in kWh.

Generation available

Green bars  mean you are currently exporting. Now is the time to use cheaper energy.

Temperature

Current temperature where the display is located.

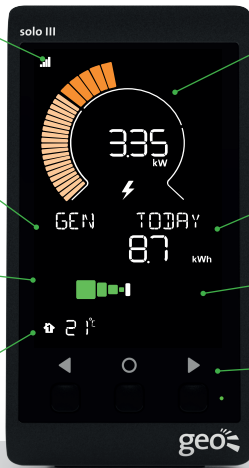

Speedometer

Shows how much is being generated, consumed, exported or imported now. The digits show the value in kWh. (Only shown when in usage view.)

Cost totals

Select between **SAVE** (savings), **COST** (cost of import).

Importing

Red bars  mean you are currently importing. This is the most expensive electricity.

Buttons

◀ changes the total being shown, ▶ changes the time period and ○ switches between usage and cost views.

FAQs

The Solo III display is blank

Check that the power supply is connected to the display. Also try and press any button, as it could be that the display has switched off the back-light.

The dial is not being shown

If the current usage view is zero then the dial will not be shown.

No generation or consumption is being shown

Check the signal strength icon and try and move the display closer to the meter.

How do I set my tariff?

Please refer to the installation guide on how to set your tariffs. Access the tariff settings screens by pressing the middle button for 5 seconds.